

# ZIO Java API

## *Tutorial*

---

1.2, Feb 2012





## Table of Contents


1. Introduction .....	1
2. API Examples .....	2
1. Controlling LEDs .....	2
2. Interfacing Switches .....	3
3. Interfacing I <sup>2</sup> C Devices .....	3
4. Interfacing a Potentiometer .....	5
5. Controlling LED Brightness .....	5
6. Interfacing SPI Devices .....	6

# Chapter 1. Introduction

ZIO is a IO framework for rapid product development. And as such it comes along with an API that can be used to access the IO interfaces provided by the board. This document shows how to use the API, to do simple tasks, which can then be used as a reference for building complex applications.

The ZIO motherboard has 6 modules: GPIO, I2C, ADC, DAC, PWM and SPI. Each module is in charge of a set of signals associated with the module. The modules and their associated signals is shown in the following diagram.

**Figure 1.1. ZIO Modules and Signals**

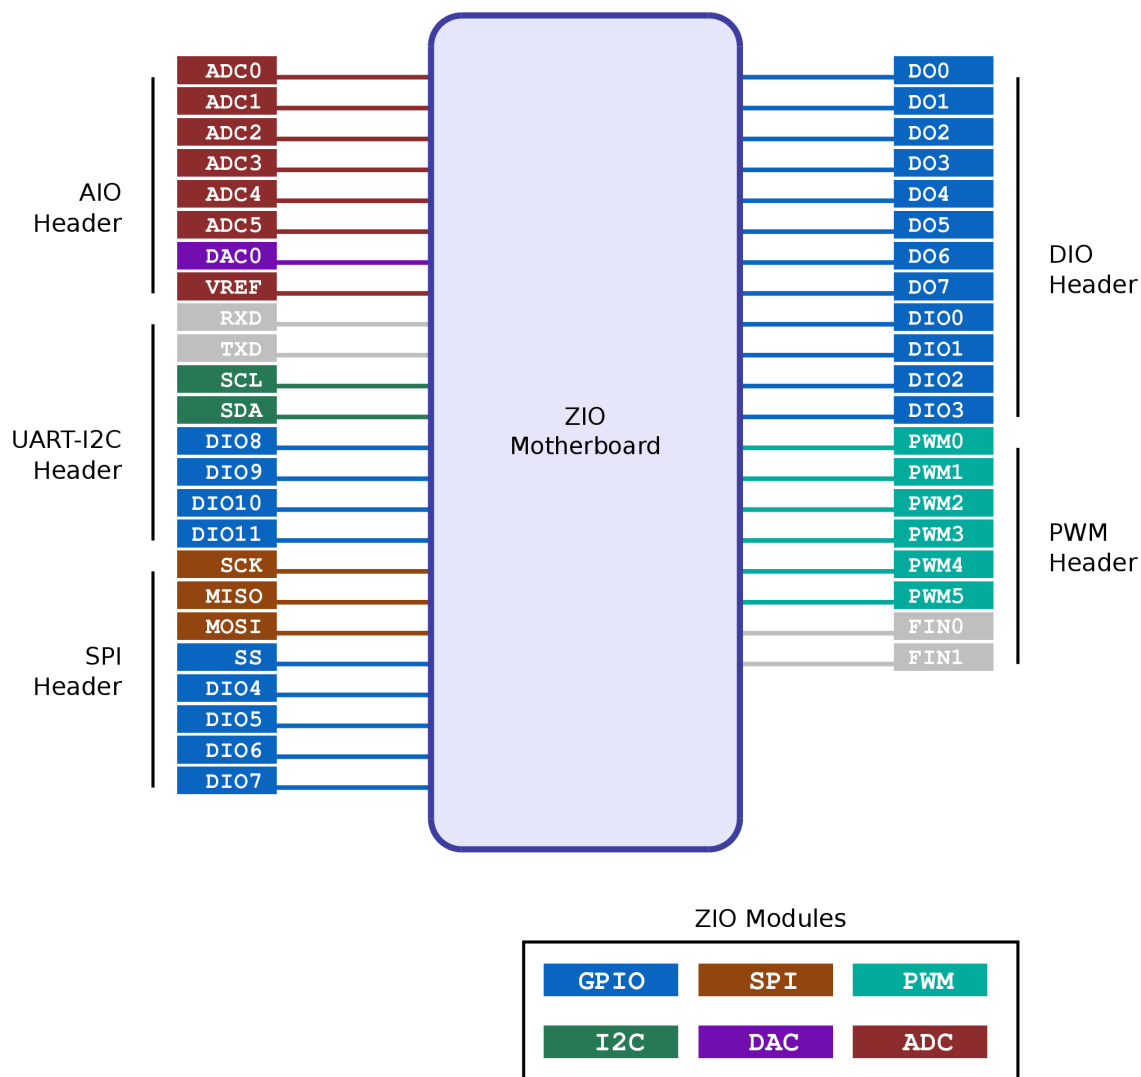


These modules on the motherboard are accessed through an agent software running on the motherboard. The API communicates with the agent and performs actions on the modules. Each module is handled by a separate object class in the API. The modules and their corresponding classes are described in detail in the following sections.

# Chapter 2. API Examples

## 1. Controlling LEDs

LEDs can be easily connected to GPIO output pins as shown in the following circuit. When the GPIO output pin is set to high, the LED turns on and when the pin is set to low, the LED turns off. The code to blink the LED is listed below.

**Figure 2.1. LED Circuit**

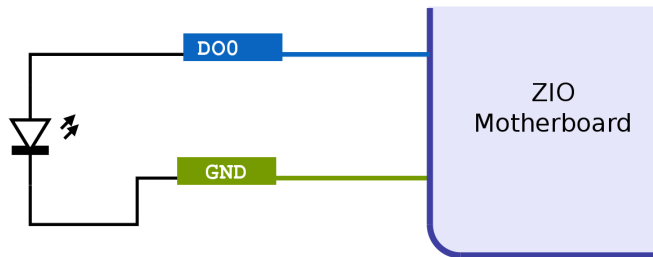

**Listing 2.1. LED Blink, Java Code**

```
import com.zilogic.zio.*; // ❶

class LED {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0"); // ❷
        GPIO gpio = new GPIO(agent); // ❸
        int ledPin = 12; // ❹


        while (true) {
            gpio.writePin(ledPin, 1); // ❺
            Thread.sleep(1000);

            gpio.writePin(ledPin, 0); // ❻
            Thread.sleep(1000);
        }
    }
}
```

- ❶ The ZIO API resides in a Java package called `com.zilogic.zio`. To use the API the package has to be imported.
- ❷ The `Agent` class is used to establish a communication link between the host and the board. The device file that corresponds to the USB serial port of the ZIO board is passed as argument. Under Linux, it is usually `/dev/ttyUSBx` or `/dev/ttyACMx`. Under Windows, it is `COMx`.
- ❸ The `GPIO` class is used to control the GPIO module. The `Agent` object is passed as argument to the constructor.
- ❹ The GPIO output pin to which the LED is connected.
- ❺❻ The pin state can be controlled using the `writePin` method of the `GPIO` class. The first argument is the pin to control. The second argument is the value to be set on the pin.

## 2. Interfacing Switches

Switches can be connected to GPIO output pins as shown in the following circuit. When the switch is not pressed, the input pin is internally pulled up to 5V, and reads high. When the switch is pressed, the input pin is grounded, and reads low. The code to read the switch status is listed below.

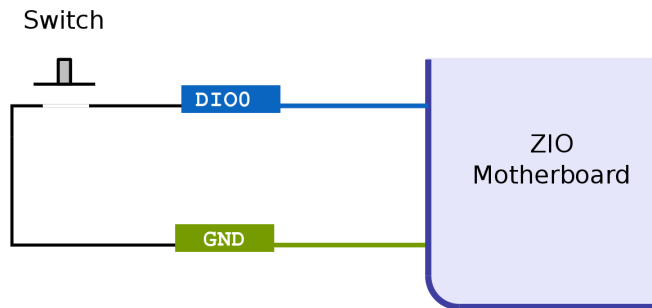

### Listing 2.2. Switch Status, Java Code

```
import com.zilogic.zio.*;

class Switch {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0");
        GPIO gpio = new GPIO(agent);
        int switchPin = 0; // ❶

        while (true) {
            int state;

            state = gpio.readPin(switchPin); // ❷
            if (state == 1) {
                System.out.println("Switch Off");
            } else {
                System.out.println("Switch On");
            }


            Thread.sleep(500);
        }
    }
}
```

- ❶ The GPIO input pin to which the switch is connected.
- ❷ The `readPin` method of the `GPIO` class can be used to read the pin state. The pin no. is passed as argument. The method returns the state of the pin.

## 3. Interfacing I<sup>2</sup>C Devices

I<sup>2</sup>C is a bi-directional two-wire (data and clock) serial bus that provides a communication link between integrated circuits. Examples of simple I<sup>2</sup>C-compatible devices found in embedded systems include EEPROMs, thermal sensors, and real-time clocks.

I<sup>2</sup>C IO Expander (PCF8574) provides 8 digital IO lines that can be controlled, through the I<sup>2</sup>C bus. The IO Expander can be interfaced to the I<sup>2</sup>C module as show in the following circuit. The code to access the I<sup>2</sup>C IO Expander is listed below.

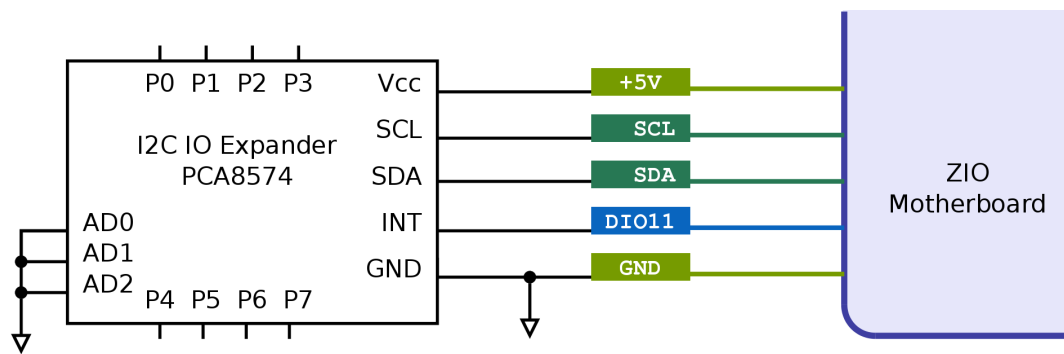**Figure 2.2. I<sup>2</sup>C IO Expander Circuit****Listing 2.3. I<sup>2</sup>C IO Expander, Java Code**

```
import com.zilogic.zio.*; // ❶

class I2CExpander {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0");
        I2C i2c = new I2C(agent); // ❷
        int dev = 0x20; // ❸
        int[] wdata = new int[] { 0xFF };
        int[] rdata;

        i2c.config(100); // ❹
        try {
            i2c.write(dev, wdata); // ❺
            rdata = i2c.read(dev, 1); // ❻
        } catch (I2CNoAckException e) {
            System.out.println(e);
            agent.close();
            return;
        }


        String msg = String.format("IO Expander Input: 0x%02X", rdata[0]);
        System.out.println(msg);
        agent.close();
    }
}
```

- ❶❷ The `I2C` class is used to control I<sup>2</sup>C module. The `Agent` object is passed as argument to the constructor.
- ❸ The 7-bit device address of the I<sup>2</sup>C device can be obtained from the data sheet, and the hardware configuration of the pins A0, A1 and A2. In this case it happens to be 0x20.
- ❹ The `config` method of the `I2C` class is used to configure the bus clock frequency. The frequency is specified in kHz.
- ❺ The `write` method of the `I2C` class is used to write bytes to the I<sup>2</sup>C device. The device address is specified as the first argument. The array of bytes to be written is specified as the second argument.
- ❻ The `read` method of the `I2C` class is used to read bytes from the I<sup>2</sup>C device. The device address is specified as the first argument. The no. of bytes to be read is specified as the second argument. The method returns an array of bytes read from the device.

## 4. Interfacing a Potentiometer

A single turn potentiometer in a variable resistor connection can be used in volume control applications. The potentiometer is interfaced to the ADC module as shown in the following circuit. The potentiometer is connected in voltage divider configuration. The voltage drop across the bottom half of the voltage divider is measured by the ADC. The code to read the voltage from the ADC input is given below.

**Figure 2.3. Potentiometer Circuit**

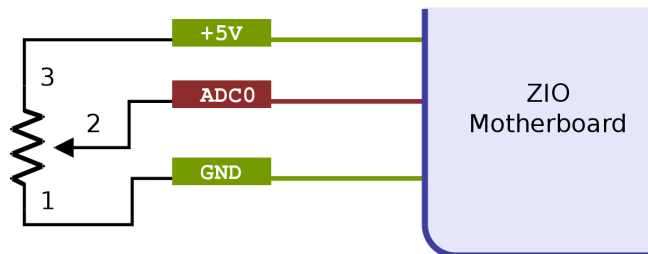

**Listing 2.4. Potentiometer, Java Code**

```
import com.zilogic.zio.*; // ❶

class Pot {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0");
        ADC adc = new ADC(agent); // ❷
        int potPin = 0; // ❸

        while (true) {
            double value = adc.readPin(potPin); // ❹

            String msg = String.format("ADC Value: %1.2f", value);
            System.out.println(msg);

            Thread.sleep(500);
        }
    }
}
```

- ❶❷ The ADC class is used to control ADC module. As with other module objects, the Agent object is passed as argument to the constructor.
- ❸ The ADC input pin to which the pot. is connected.
- ❹ The readPin method of the ADC class can be used to get the voltage at the pin. The pin no. is passed as argument to the method. The function returns the voltage on the pin as a floating point value. In case the raw ADC value is required, readPinRaw method can be used. The method returns a value between 0x0000 and 0xFFFF.

Note: Even though the ADC is 10-bit, the value is oversampled to 16-bits, to make the interface future proof.


## 5. Controlling LED Brightness

The brightness of an LED can be controlled by driving the LED using a PWM signal. PWM is a digital control technique wherein the processor adjusts the duty cycle of a sequence of fixed-width pulses.



The LED can be interfaced to the PWM module as shown in the following circuit. When the duty cycle increases, the ON period of the PWM signal increases and the LED brightness increases. The code to control the LED brightness is given below.

**Figure 2.4. LED Brightness Circuit**

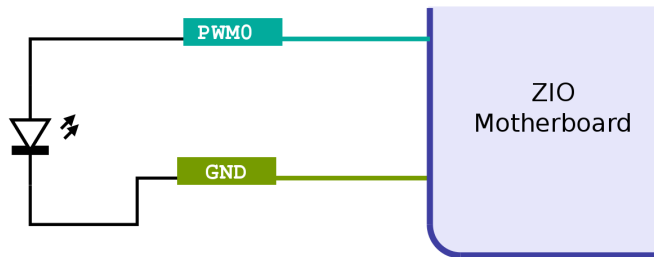

**Listing 2.5. LED Brightness Control, Java Code**

```
import com.zilogic.zio.*;

class Brightness {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0");
        PWM pwm = new PWM(agent); // ❶
        int ledPin = 0x1; // ❷


        pwm.setFreq(ledPin, 2); // ❸
        pwm.setDuty(ledPin, 0); // ❹
        pwm.start(ledPin); // ❺

        while (true) {
            for (int i = 0; i < 100; i += 3) {
                pwm.setDuty(ledPin, i);
                Thread.sleep(10);
            }
        }
    }
}
```

- ❶ The PWM class is used to control the PWM module. As with other module objects, the Agent object is passed as argument to the constructor.
- ❷ The PWM output pin to which the LED is connected. The PWM API accepts a list of pins, so that the PWM parameters of multiple pins can be set simultaneously.
- ❸ The PWM freq is set using the setFreq method of the PWM class. The list of pins is passed as the first argument. The frequency in kHz is passed as the second argument.
- ❹ The PWM duty is set using the setDuty method of the PWM class. The list of pins is passed as the first argument. The duty cycle in percentage is passed as the second argument.
- ❺ The PWM signal generation is started using the start method. And can be stopped using the stop method.

## 6. Interfacing SPI Devices

Serial Peripheral Interface (SPI) is an inexpensive chip interconnection bus, popular on circuit boards. SPI devices like the SPI EEPROM (93C46) can be interfaced to the SPI port as show in the following circuit. The code to access the SPI EEPROM is given below.

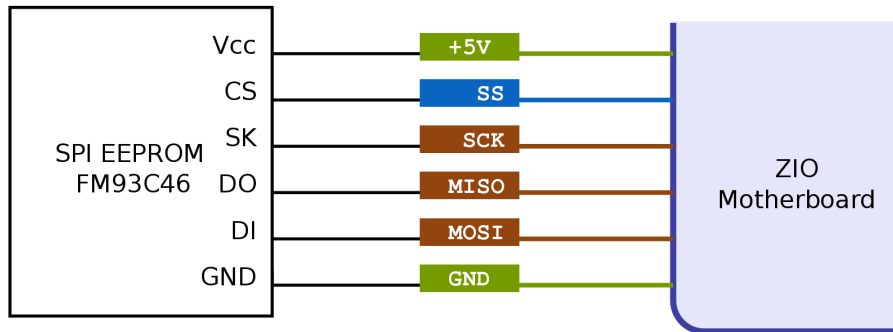**Figure 2.5. SPI EEPROM Circuit****Listing 2.6. SPI EEPROM, Java Code**

```
import com.zilogic.zio.*; // ❶

class EEPROM {
    public static void main(String args[])
        throws ProtocolException, InterruptedException {

        Agent agent = new Agent("/dev/ttyUSB0");
        SPI spi = new SPI(agent); // ❷
        GPIO gpio = new GPIO(agent); // ❸
        int ssPin = 20;

        spi.config(100,
            SPI.CPOL_IDLE_LOW,
            SPI.CPHASE_LEAD_EDGE,
            SPI.ENDIAN_MSB_FIRST); // ❹

        int[] wdata;
        int[] rdata;
        int addr = 0x2;

        gpio.writePin(ssPin, 1); // ❺

        try {
            wdata = new int[] { 0x03, addr, 0x00, 0x00 };
            rdata = spi.writeRead(wdata); // ❻
        } finally {
            gpio.writePin(ssPin, 0); // ❼
        }

        String msg = String.format("EEPROM has 0x%02X%02X at address 0x%04X",
                                   rdata[2], rdata[3], addr);

        System.out.println(msg);
        agent.close();
    }
}
```

❶❷ The SPI class is used to control SPI module. The Agent object is passed as argument to the constructor.

❸ The GPIO class is used for controlling the slave select pin. The slave select pin available on the SPI header is GPIO pin no. 20.

- ④ The `config` method of the `SPI` class is used to configure the bus clock frequency, the clock polarity, the clock phase, and the data endianness.
- ⑤⑦ The slave select signal is made high while accessing the chip, using the `GPIO writePin` method.
- ⑥ The `writeRead` method of the `SPI` class is used to write / read bytes to / from the slave. The bytes to be written is specified as argument. An equal no. of bytes is returned as a list. Here a 16-bit value is read from address `0x2`.